


The DEKOR® Waterproof Dimmer is an optional addition to your lighting system allowing you to adjust the brightness down and remembers the chosen settings even when the power is lost. Matching buttons on the front panel and remote give you full control within 40ft or more. To control multiple zones separately, you must install an individual dimmer for each zone.

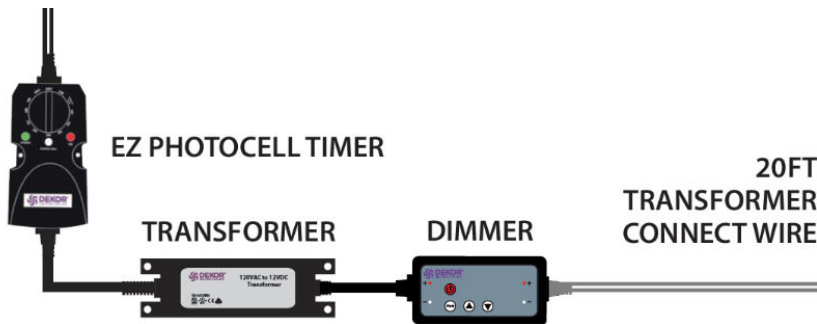






Optional splitters for use with multiple dimmers

Installation:

1. Attach the male end to the output of the DEKOR transformer or optional splitter.
2. Attach the female end to the Trans-Connect cable included with the transformer.
3. Connect the transformer to a 120V AC outlet protected by a GFI circuit.



Controls:

-  Power on/off
-   Fine adjustment of brightness up or down
-  or  4 pre-set brightness settings to scroll through
Minimum setting is extremely low and may appear to be off.

Programming a remote:

Only one remote can be programmed per each dimmer base.

1. Unplug the transformer from the wall outlet.
2. Press and hold the ▲ and ▼ buttons on the remote at the same time.
3. Plug the transformer in to the wall outlet (you should see the connected lights flash once)
4. Release the ▲ and ▼ buttons on the remote.
5. Press the ⏻ button on the remote to save the change.
6. Test all functions.



CAUTION:

When making a connection between a Plug-N-Play connector or splitter, observe the polarity key to make a proper connection. The male and female connectors have a flat side that **MUST MATCH UP**. Do not force the connectors together. Plug-N-Play connectors are waterproof, but use of dielectric grease is mandatory for any connection with constant exposure to water. Dielectric grease should be added prior to connection.

