

The DEKOR® EZ Indoor Timer is the perfect choice for controlling indoor lights where a photocell timer would not work, or when you want more customizable control over your light schedules. While the device can be used to control outdoor lights, the unit itself is to be used indoors and protected from the elements. For more information call 1.800.258.0344, or connect to our responsive chat messenger at dekorlighting.com.

First Time Usage

This product contains a rechargeable battery that maintains your settings in the event of a power outage, and allows you to set up your timer before plugging it into the wall. If you do not see anything on the LCD screen, please plug the timer into a wall socket for at least 5 minutes to let this battery recharge.

The timer needs to be given the correct time and day of the week before you can create schedules. To set the current:


Day of the week: Hold down “CLOCK” and press “WEEK” repeatedly until the correct day of the week shows at the top of the screen.

Hour: Hold down “CLOCK” and press “HOUR” repeatedly until the correct hour is shown. This timer only shows 12-hour time, so check the “AM” or “PM” designator on the left side of the screen.

Minutes: Hold down “CLOCK” and press “MINUTE” repeatedly until the correct minutes are shown.

Seconds: Hold down “CLOCK” and press “SEC” repeatedly until the correct seconds are shown.

TIP: If you hold down the “HOUR”, “MIN”, or “SEC” button for more than 2 seconds while setting the time, the value will advance quickly.

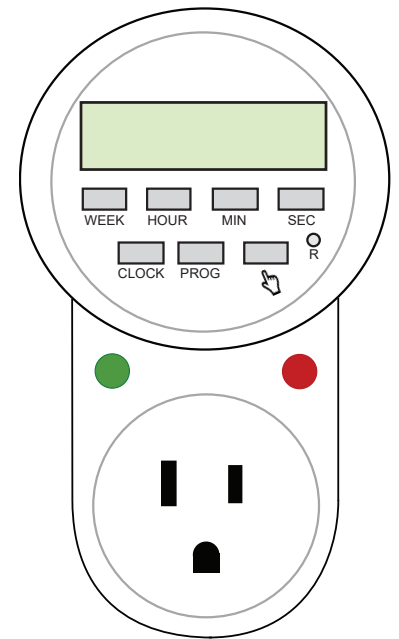

Setting Schedules

You can set up to 8 schedules for this timer. The schedules can be set to run on a variety of day-of-the-week combinations, so you can set different schedules for weekdays, weekends, or several different ON/OFF cycles that run every day.

To set up your first schedule, press “PROG”. You will see “1^{ON}” appear in the lower left-hand corner. Using the buttons “WEEK”, “HOUR”, and “MIN”, set the day(s) of the week the schedule should run, and the hour/minute time the timer should turn your lights ON.

There are 16 day combinations. In order, you can cycle through the combinations shown to the right.

Schedule Combination Options:

(Mo	Tu	We	Th	Fr	Sa	Su)
(Mo),	(Tu),	(We),	(Th),	(Fr),	(Sa),	(Su),
(Mo	Tu	We	Th	Fr	Sa),	Su),
(Mo	We	Fr),	(Tu	Th	Sa),	
(Mo	Tu	We),	(Th	Fri	Sa),	
(--- : ---)						

This last option allows you to remove a schedule from rotation. If you set up 4 schedules but decide you no longer want to run schedule #3, you can set the schedule’s day setting to “--- : ---” and it will not run.

Once you’ve established the day of week and time that the timer should turn on, press “PROG” again and see “1^{OFF}” in the lower left-hand corner. Set the time for the timer to turn off.

If you want to set up more schedules, press “PROG” again to move on to “2^{ON}”, “2^{OFF}”, etc.

To exit the programming menu at any time, press “CLOCK”.

Have any questions about the DEKOR[®] EZ Indoor Timer? We're here to help! Contact DEKOR by phone at 1-800-258-0344 or chat with us online at dekorlighting.com.

Manual and Automatic ON/OFF Modes

There are 4 modes you can cycle through by pressing the Mode button, marked with a pointing finger symbol: "ON", "ON AUTO", "AUTO OFF", and "OFF".

"ON" and "OFF" give you manual control over the lights. If you use these buttons, the schedules will not run and the timer will remain only ON or only OFF.

"ON AUTO" and "AUTO OFF" will run any schedules you've set up, and let you set the initial state of the timer. For example, if your schedule tells the timer to turn ON at 8am and OFF at 5pm every day, but you initially set up the timer at 2pm, you could set the mode to "ON AUTO" to turn the lights on now and let them shut off automatically at 5pm. If you set the mode to "AUTO OFF" in the same situation, the lights would not come on until the schedule dictated at 8am the next day.

Random Mode

To randomize the ON/OFF times of every schedule, press "WEEK" and "HOUR" simultaneously. The RND symbol will show on the right-hand side of the display.

Random mode affects the ON and OFF times of every schedule by between 2 and 32 minutes.

Daylight Savings Time

Press "HOUR" and "MIN" simultaneously to adjust the current time and all schedules by 1 hour. The first time you do this, the "+1hr" icon will show on the right-hand side of the display.

When DST ends, press "HOUR" and "MIN" simultaneously again to move the time back. The "+1hr" symbol will disappear.

Warnings

- » This product is for use with 120VAC at 60Hz only
- » Do not exceed 1500W (12.5A at 120V) total power draw
- » Use dry, indoor locations only
- » Power DEKOR lighting products with a DEKOR transformer. Failure to do so will void the warranty of any inline products.
- » Consult an electrician if you have any electrical concerns

Resetting the Timer

Resetting the timer deletes all schedules and all other information stored in the timer. To reset the timer, use a small tool (such as the end of a paper clip) to press the "R" button. The display will go blank. When you release the button, the display will come on and show the time as "0:00:00".

You will need to repeat timer setup to establish the correct day and time before you can set up any new schedules.

Troubleshooting

If you experience seemingly erratic light behavior, please verify that you do not have competing schedules in place. For example, if you have a schedule that runs from 8am to 2pm every single day, a schedule that runs 10am-4pm on Saturdays would cause a conflict.

If the display is off, dim, or out of focus, plug the timer into an outlet for a few minutes to let the internal battery recharge.

If you have any other problems, please contact us at 1-800-258-0344.